

# LW12-16 系列万能转换开关常用接点图表

## 1) 综合适用开关接点图表

1.LW12-16□/□. □□□□.1

型号 角度	Z/4.0001.1		Z/4.0002.1		9.0004.1		9.0006.1		9.0007.1		4.0009.1		Z/4.0010.1		Z/4.0017.1		/4.0071.1		Z/4.0072.1		9.0291.1		9.0292.1		9.0293.1		9.0294.1		9.0295.1		9.0297.1		9.0298.1	
	0°	45°	0°	45°	0°	90°	45°	45°	90°	0°	45°	0°	0°	45°	45°	90°	0°	45°	0°	45°	45°	45°	0°	90°	0°	90°	45°	45°	45°	45°	90°	0°	90°	0°
端子编号	↑	↗	↑	↗	↑	⇌	↘	↗	⇌	↑	↘	↑	↑	↗	↗	⇌	↑	↗	↘	↗	↘	↗	↑	⇌	↑	⇌	↘	↗	↘	↗	⇌	↑	⇌	↑
1-2	x				x		x		x	x			x				x				x		x		x				x	x				
3-4		x		x		x		x		x		x		x		x		x		x		x						x		x				x

型号 角度	9.0299.1		9.0300.1		/4.5002.1		/4.5070.1		/4.5071.1		/4.5072.1		9.5073.1		/4.5074.1		/4.5075.1		Z/4.5389.1		D/4.0003.1		Z/4.0011.1		Z/4.0012.1		Z/4.0013.1					
	90°	0°	90°	0°	0°	45°	0°	45°	0°	45°	0°	45°	0°	90°	0°	45°	0°	45°	45°	0°	45°	0°	45°	0°	45°	0°	45°	0°	45°	0°		
端子编号	⇌	↑	⇌	↑	↑	↗	↑	↗	↑	↗	↑	⇌	↑	⇌	↑	↗	↑	↗	↘	↑	↘	↑	↘	↑	↘	↑	↘	↑	↘	↑		
1-2	x		x		x	x	x		x	x					x		x		x	x			x		x			x				
3-4	x					x	x			x				x	x					x		x						x	x			x

型号 角度	Z/4.0014.1			Z/4.0015.1			/4.0081.1			/4.0083.1			/4.5098.1			D/4.5100.1			/4.5101.1			/4.5107.1			/4.5108.1			/9.5296.1			/4.4501.1					
	45°	0°	45°	45°	0°	45°	45°	0°	45°	45°	0°	45°	45°	0°	45°	45°	0°	45°	0°	45°	135°	0°	45°	90°	45°	0°	45°	90°	0°	90°	90°	45°	0°	45°		
端子编号	↘	↑	↗	↘	↑	↗	↘	↑	↗	↘	↑	↗	↘	↑	↗	↘	↑	↗	↑	↗	↑	↘	↑	↗	⇌	↘	↑	↘	↑	↗	⇌	↑	⇌	↘	↑	↗
1-2	x		x	x	x				x	x					x	x			x				x		x			x			x			x		
3-4	x		x		x	x	x					x	x	x			x			x							x			x	x					

型号 角度	/9.4502.1				/4.4503.1				/4.4506.1				Z/4.4801.1				Z/4.4802.1				/4.5181.1				/4.5184.1				/4.5185.1				
	180°	90°	0°	45°	135°	90°	45°	0°	45°	0°	45°	90°	45°	0°	45°	90°	45°	0°	45°	45°	0°	45°	90°	90°	45°	0°	45°	90°	45°	0°	45°		
端子编号	↓	⇌	↑	↗	↘	⇌	↗	↑	↘	↑	↗	⇌	↘	↑	↗	⇌	↘	↑	↗	↘	↑	↗	⇌	⇌	↘	↑	↘	↑	↗	⇌	↘	↑	↗
1-2		x		x	x			x				x	x					x				x		x			x			x			x
3-4	x		x		x	x				x				x	x					x					x			x			x	x	

型号 角度	/4.5594.1				/9.9042.1				/4.5180.1				/4.5182.1				/4.5183.1			
	0°	45°	90°	135°	90°	0°	90°	180°	45°	0°	45°	90°	90°	45°	0°	45°	90°	0°	45°	90°
端子编号	↑	↗	⇌	↘	⇌	↑	⇌	↓	↘	↑	↗	⇌	↘	↑	↗	⇌	↑	↗	↘	⇌
1-2		x		x	x			x		x	x	x	x				x		x	x
3-4			x	x		x	x				x	x				x	x			x

2.LW12-16□/□. □□□□.2

型号 角度	/4.0391.2		/4.0392.2		/4.0394.2		/4.0395.2		/9.0396.2		/4.0455.2		/9.0609.2		/9.0611.2		/9.0616.2		/9.0617.2		/9.0618.2		/9.0619.2		/9.0624.2		/9.0633.2		/9.0637.2		/9.0642.2		/9.2208.2	
	0°	45°	0°	45°	45°	0°	0°	45°	45°	45°	90°	45°	45°	45°	45°	45°	90°	0°	90°	0°	45°	45°	0°	90°	90°	0°	0°	90°	0°	90°	90°	0°		
端子编号	↑	↗	↑	↗	↘	↑	↑	↗	↘	↗	⇌	↘	↘	↗	↘	↗	⇌	↑	⇌	↑	↘	↗	↑	⇌	⇌	↑	↑	↑	⇌	↑	⇌	↑		
1-2	x					x	x			x		x		x		x		x		x		x		x		x		x		x		x		
3-4	x				x	x				x		x		x		x		x		x		x		x		x		x		x		x		
5-6		x		x		x	x			x		x		x		x		x		x		x		x		x		x		x		x		
7-8		x		x	x		x			x		x		x		x		x		x		x		x		x		x		x		x		